

User Manual

WARRANTY CARD


Owner Warranty certificate

(Users save, show it to the maintenance point of repair)

Product name:
Model:
Place of origin:
Warranty period:
Invoice number:
Date of purchase:

Maintenance records

Repair date:	Date of inspection:
Failure, maintenance, handling of:	
Maintenance units:	Repairer's signature:

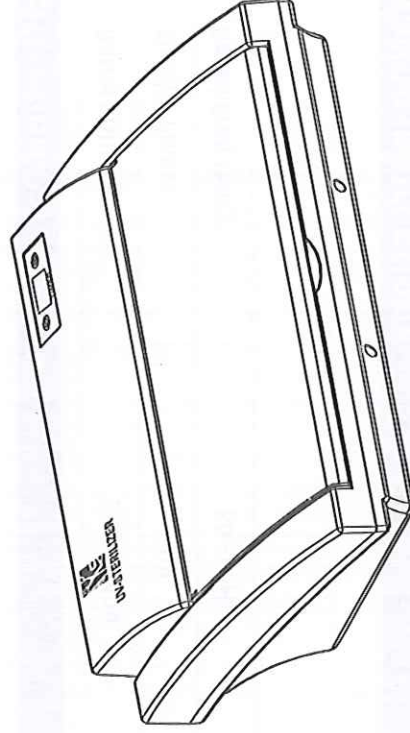


Made in China

UV STERILIZING CABINET
Professional Beauty Instrument



Name of product component

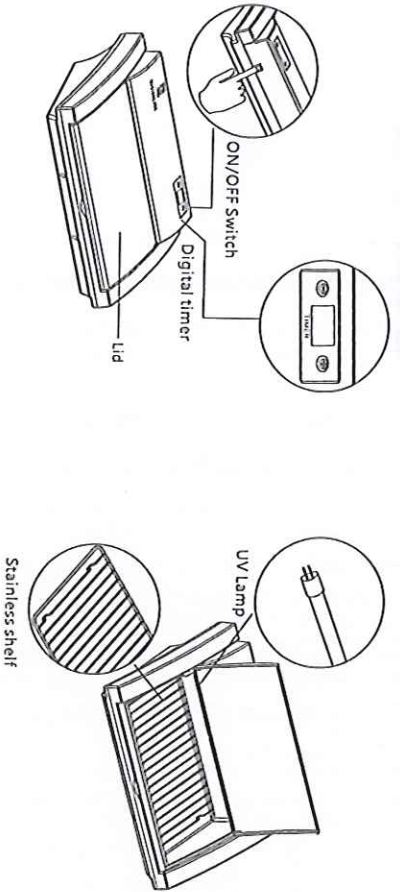


Specification Parameters


Rated Voltage	220V-240V
Electric Power	8W
Rated Frequency	50 - 60Hz

Operating Instructions


1. Connect to electricity with rated voltage. Open the lid, and put utensils on the metal grills in the bottom of the cabinet, then cover the lid.

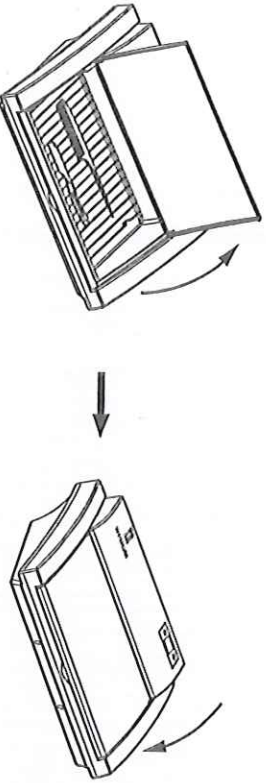

2. Switch the ON/OFF button on the back of the unit to "ON" position. The unit will beep and the LED display will illuminate, which indicates the unit has started working.

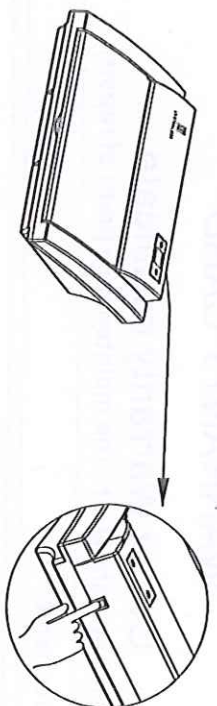

3. The default time for sterilizing is 30 minutes. By pressing the "+" or "-" buttons, you can set desired time for sterilizing from 5 minutes to 60 minutes based on your needs. The unit will automatically stop working once the set time is reached.

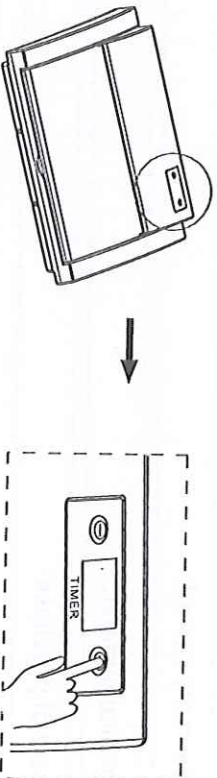

4. To protect users from hazards of UV lights, if the lid is opened during sterilizing process, the unit will beep twice, and the UV lamp will switch off. The LED display will show "Op". Once the lid is covered back, the unit will start working normally again in 3 seconds.

Warning

- This device is designed for use by professionals properly trained in its use.
- Use this product for its intended use only.
- This product should never be operated by or in close proximity to children.
- Unplug from electrical outlet when not in use.
- Do not operate this device if it has a damaged cord or plug, if it is not working properly, if it has been dropped or damaged, or dropped in water.
- Do not use an extension cord with this product.
- Do not use outdoors. This product is designed for indoor use only.
- Do not place device where it can fall or be pulled into a tub or sink. Do not place in or drop into water or other liquid, and always store in a dry place.
- Never attempt to disassemble or repair the product yourself.

Replacing the UV bulb

- Turn off the unit by using the power switch.
- Unplug the cord from the power outlet.
- Screw off the faulted UV bulb.
- Screw on a new T5VH/8W UV bulb, recommended wave length 285nm(UVC)