

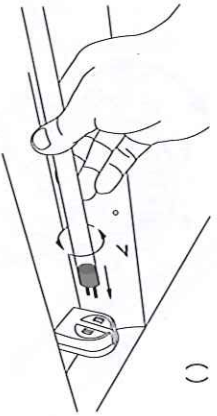


Replacing the UV bulb

- Please use a T5/6W UV bulb with wave length of 220-275nm. Quartz UV bulb is recommended for best performance. If quartz UV bulb is not available, please use a T5 6W High Boron UV bulb.
- Turn off the unit and unplug the cord from power outlet.
- Screw off the faulted UV bulb as indicated on the diagram (1).
- Screw on a new UV bulb as indicated on the diagram (2).

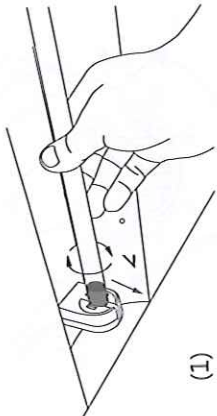

User's Manual

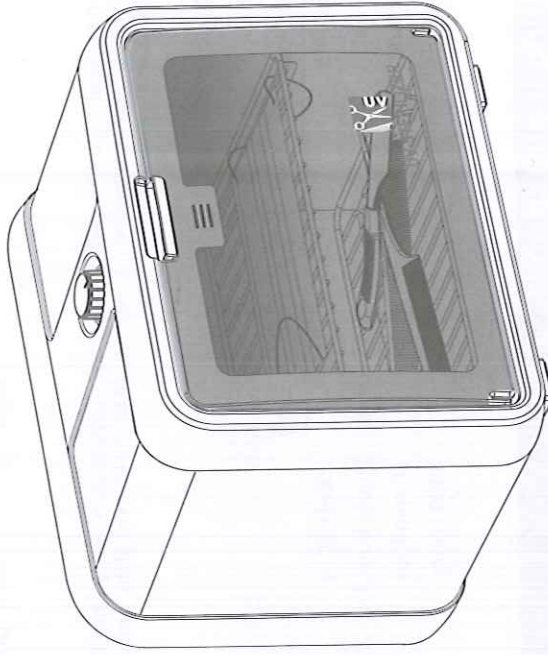

Warranty Card

(Users save, show it to the maintenance point of repair)

Product name:
Model:
Place of origin:
Warranty period:
Invoice number:
Date of purchase:

Maintenance records

Repair date:	Date of inspection:
Failure, maintenance, handling of:	
Maintenance units:	Repairer's signature:


UV STERILIZING CABINET



1 year limited Warranty

Made in China

Name of product component

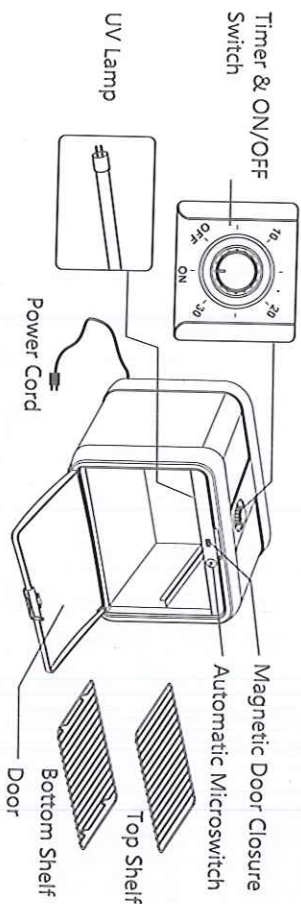

Features



This UV sterilizing cabinet is ideal for sterilizing tools and accessories in beauty salons, hair salons and nail salons. Easy and convenient to operate, efficiently kill most of the germs and viruses on your tools and accessories.

Specification Parameters

Rated Voltage	110V~120V	220V~240V
Rated Input Power	6W	6W~8W
Rated Frequency	60Hz/50Hz	
UV Bulb Type	T5 6w~8w	Quartz bulb 220~275nm
Suggested time of Disinfection	10 minutes	
Servicing life of UV Lamps	5000 hours	



Operating Instructions

1. For first time usage, please clean the cabinet and the shelves thoroughly. Make sure the cabinet and shelves are completely dry before operation.
2. Put the tools and accessories that need disinfection on the shelves in the cabinet. Close the door and connect the power supply.

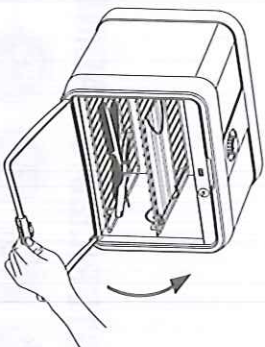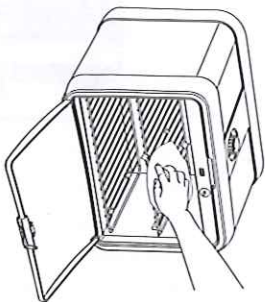

3. Turn the timer knob anti clockwise to ON position, the unit will switch on and keep working until it's being turned off manually.

4. Turn the timer knob clockwise to set up desired disinfection time. Recommend disinfection time is 10 minutes for regular operations. The unit will automatically switch off when reaching the set time.

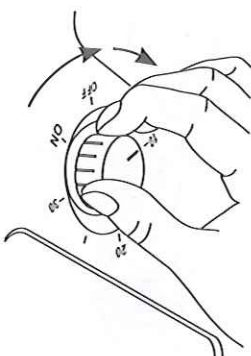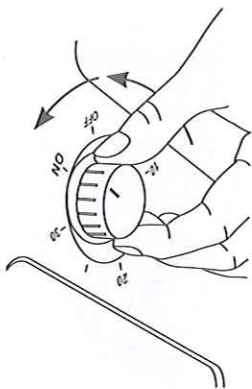

5. To protect users from hazards of UV lights, if the door is opened during sterilizing process, the microswitch will be activated and automatically switch off the unit. Once the door is closed, the unit will resume working.

Warning

- UV light is hazard to your health, please don't expose yourself directly to the UV lights.
- This product should never be operated by or in close proximity to children.
- Unplug from electrical outlet when not in use.
- Do not operate this device if it has a damaged cord or plug, if it is not working properly, if it has been dropped or damaged, or dropped in water.
- Do not use outdoors. This product is designed for indoor use only.
- Do not place device where it can fall or be pulled into a tub or sink. Do not place in or drop into water or other liquid, and always store in a dry place.
- Never attempt to disassemble or repair the product by yourself.

Maintenance

1. When cleaning the unit, use wet cloth or towel, with neutral detergent; do not use acid, alkaline or corrosive or poisonous detergents.
2. After usage of the unit, disconnect the power line. If the unit will not be used for a long time or needs maintenance, please make sure the power is disconnected.
3. Don't open the unit unless by professionals